

Pulsation Dampener PDS



EN
02

Operation & Maintenance Instructions

Read these operation and maintenance instructions before start up!
To be held for future reference.

General

Pressure fluctuations in hydraulic piping systems and fittings result in uneven operating conditions of tandem-connected consumers. If the amplitude of these fluctuations is large enough, the line network may even be disturbed or torn out of its anchoring. Pulsation frequencies which correspond to the resonance of the piping system are particularly critical. If increasing pressure peaks are not dampened, immense damages will be caused.

When using piston and diaphragm metering pumps, it is normal for pulsations to occur, the intensity of which grows with the length of the line. The smaller the line diameter, the larger the pressure peaks. When planning metering systems, especially if rigid piping is going to be used instead of flexible tubing, it is recommended to integrate pulsation dampeners. They are a simple and also effective way to reduce pressure fluctuations to a harmless level.

The function of the pulsation dampener is based on energy-converting compression and expansion of a gas cushion. A portion of the media being transported is stored and released to the piping system if the pressure decreases.

In general, a difference is made between pulsation dampeners **with** separating diaphragm and those **without** separating diaphragm.

For pulsation dampeners without separating diaphragm, the liquid is in direct contact with the gas cushion resulting from the compressed air accumulated before. After startup, the compressed air is reduced to its dampening volume. As the compressed air is gradually dissolved in the liquid, venting under pressureless condition is necessary from time to time. This disadvantage can be avoided by using pulsation dampeners with separating diaphragm. Here an elastic diaphragm separates the media from the dampening gas cushion which is thereby protected against absorption.

Discharge side of the pump

On the discharge side, metering pumps force the delivery of the media with all their power. Depending on the line length and fitting characteristics, important pressure peaks may occur, which must be smoothed by using pulsation dampeners.

Suction side of the pump


The liquid supply on the suction side must ensure that the liquid follows the suction stroke of the diaphragm or piston immediately.

The suction stroke acceleration may, however, be high so that the liquid mass in the suction line cannot follow the stroke. In this case, a cavity occurs in the column of liquid (cavitation).



Pulsation dampeners installed directly below the suction valve as „suction air chambers“ cause the liquid to flow smoothly through the suction line so that the medium reaches the metering pump with the lowest pressure loss possible.

Functional diagram

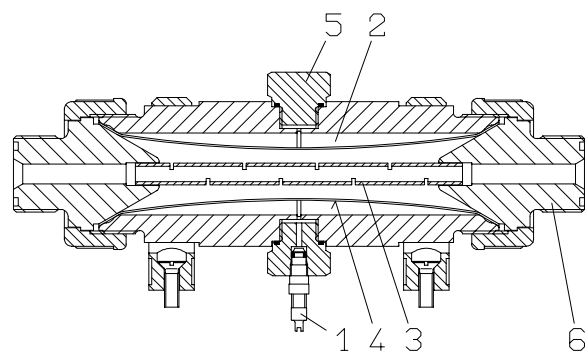

Any flow direction

- 1 Gas charging valve
- 2 Gas cushion
- 3 Support pipe
- 4 Separating diaphragm
- 5 Pressure gauge connection
- 6 Liquid connection

Pulsation dampener with tube-type diaphragm (PDS)

(registered design GM 80 11 452)

The PDS pulsation dampener described in this documentation has a separating diaphragm consisting of a tube which is positioned concentrically within a cylindrical plastic housing. The medium flows in this tube while the gas cushion is located outside the tube, in the annular gap between the tube and the plastic housing.

The advantage of this design is the possibility of manufacturing the pulsation dampener from a variety of plastics. The PDS is installed close to the pump either by means of a tee-fitting or integrating it in the supply line so that the fluid flows directly through. The PDS 80 can be mounted directly on the discharge valve.

Compressed air is used for filling. By **no** means must **oxygen** be used.

During filling according to BW 1 27 01, the pressure of the gas cushion is measured via a pressure gauge connected to the filling device. It is recommended to provide the PDS with a pressure gauge for operation as well.

Dimensioning of the pulsation dampener

If the pulsation dampener is used to reduce destructive pressure peaks, it is sufficient to choose a size which allows the remaining pressure fluctuations to be about 10% of the average operating pressure. This value has been taken into consideration in the table.

The flow rates per stroke, on which the table values are based, can be found in the data sheets of the metering pumps. The larger the pulsation dampener, the better the dampening effect.

Type	Stroke volume ⁽¹⁾ up to. . .ml/stroke	Perm. operating pressure [bar]
PDS 80	15	10
PDS 250	40	10
PDS 750	120	10
PDS2500	400	10
PDS7500	1200	4

⁽¹⁾ applicable for the remaining 10 % fluctuation of the nominal pressure in the case of single-head pumps


Initial pressure max. 6 bar

Operating pressure max. 10 bar

Temperature max. 50 °C

Dampening for flow meters

If the pulsation dampener is used to ensure constant flow for a flow meter, it might be necessary to install a throttle after the pulsation dampener. If, due to relatively short lines or a free outlet, the backpressure becomes too small, such a valve is particularly required in order to store the liquid smoothly in the pulsation dampener. The following installation is recommended.

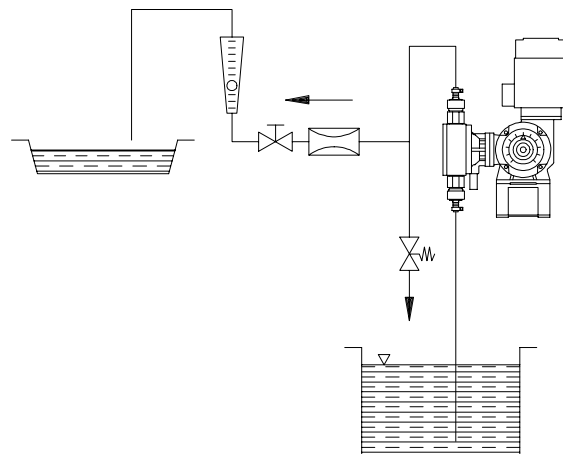


Dimensioning diagram

The diagram shown on the next page helps to determine the size of the pulsation dampener in dependence of the stroke volume of the pump and the required smoothing level of the metering flow or the existing pressure fluctuations. The actual dampening capacity, however, is influenced by numerous parameters which can be neither precisely defined nor foreseen. In some cases, it might become necessary to change the system design or add supplementary fittings in order to solve a dampening problem.


Dimensioning diagram

+/- % pressure or metering flow fluctuations
around the average value


Size of the pulsation dampener
 V_0 / cm^3

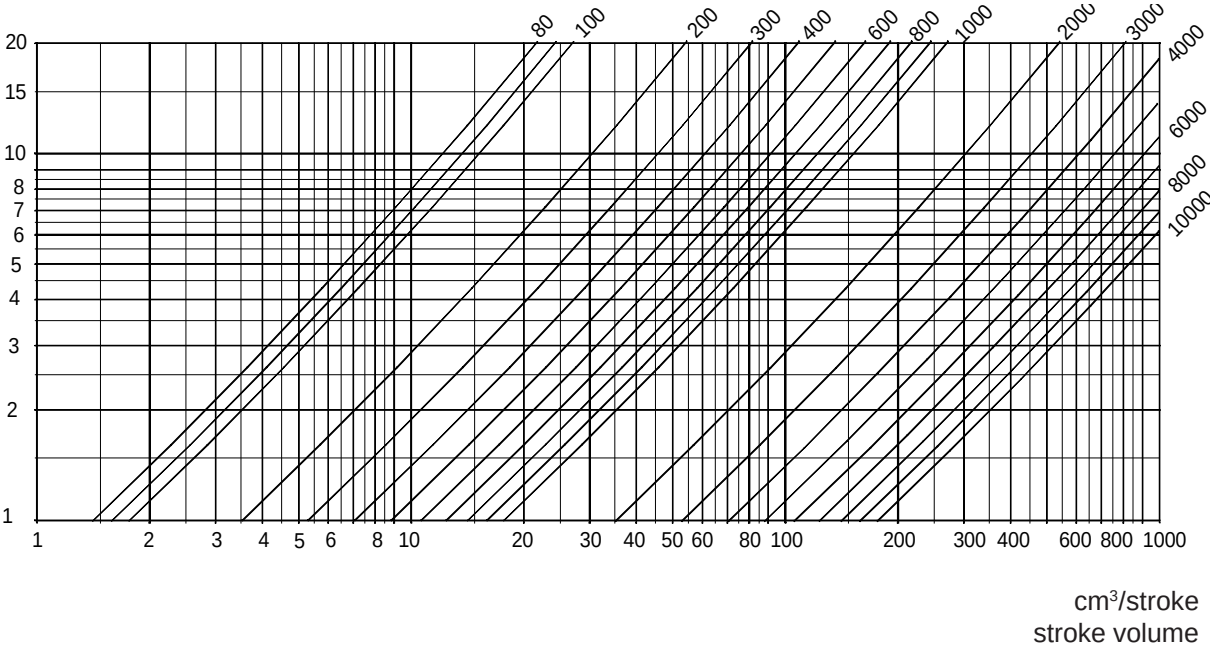

Dimensional drawings

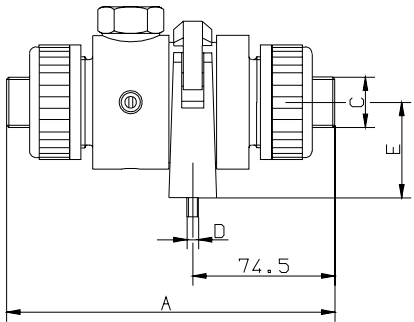


PDS 80

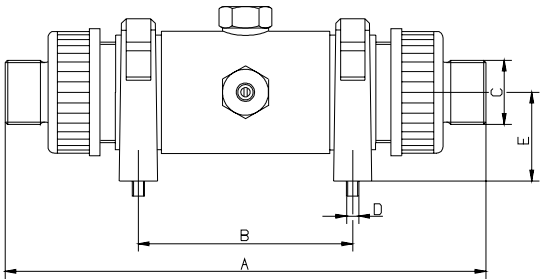

PDS 250

Dimensional tables

Type	Dimensions				
	A	B	C	D	E
PDS 80	172	--	G 3/4	M 6	50
PDS 250	314	140	G 1 1/4	M 8	64
PDS 750	363	347	G 1 1/4	ø 9	71.5
PDS2500	541	530	G 2	ø11	99.5
PDS7500	720	710	G 2 3/4	ø13	125.5

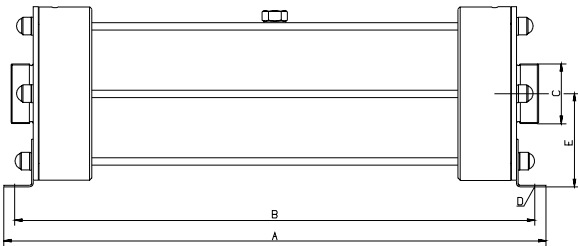


PDS 750 . . . 7500

Selection tables

To be able to offer the optimum version for each application, the PDS has been divided into the most important functional groups. Depending on the requirements, the different modules can be chosen from Tables 2 to 4. Standard pulsation dampeners are listed in Table 1.

- 1** Standard pulsation dampener **2** Pulsation dampener (basic unit without connections)
- 3** Pressure gauge, complete **4** Connections / or 1 x dummy plug

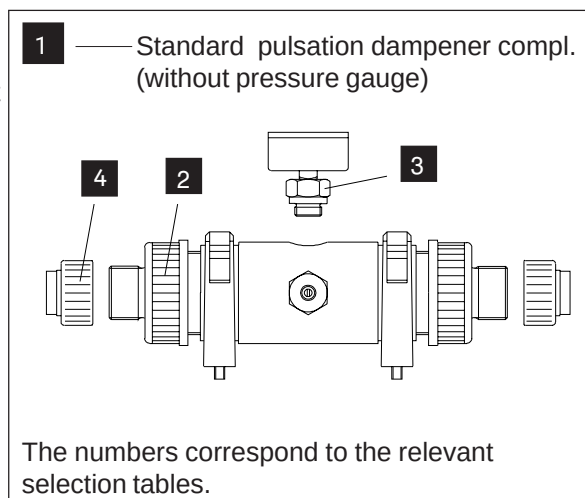


1						
Type	Diaphragm material	d ₁ (input)	d ₂ (output)	Stroke volume ⁽¹⁾ up to ... ml/stroke	PVC Part No.	PP Part No.
PDS 80	Hypalon	G 5/8 i	d 6/12	15	12701007	-
PDS 80	Viton	G 5/8 i	d 6/12	15	12701010	-
PDS 80	Hypalon	G 3/4 i	d 6/12	15	12701049	-
PDS 80	Viton	G 3/4 i	d 6/12	15	12701055	-
PDS 80	Hypalon	d 6/12	d 6/12	15	12701169	-
PDS 80	Viton	d 6/12	d 6/12	15	12701170	-
PDS 250	Hypalon	d 20 i	d 20 i	40	12702085	12701085
PDS 250	Viton	d 20 i	d 20 i	40	12702097	12701097
PDS 750	Hypalon	d 20 i	d 20 i	120	12702171	12701171
PDS 750	Viton	d 20 i	d 20 i	120	12702172	12701172
PDS 2500	Hypalon	d 40 i	d 40 i	400	12702133	12701133
PDS 2500	Viton	d 40 i	d 40 i	400	12702180	12701180
PDS 7500	Hypalon	d 63 i	d 63 i	1200	12702145	12701145
PDS 7500	Viton	d 63 i	d 63 i	1200	12702146	12701148

⁽¹⁾ applicable for remaining 10% fluctuation of the nominal pressure in the case of single-head pumps


2						
Type	Diaphragm material	Connection f. basic unit	Rec. for Ø / DN	Perm. operating pressure [bar]	PVC Part No.	PP Part No.
PDS 80	Hypalon	G 3/4 a	16 / 10	10	32814	33297
PDS 80	Viton	G 3/4 a	16 / 10	10	32819	33298
PDS 250	Hypalon	G 1 1/4 a	25 / 20	10	33276	32815
PDS 250	Viton	G 1 1/4 a	25 / 20	10	33275	32820
PDS 750	Hypalon	G 1 1/4 a	25 / 20	10	33632	32816
PDS 750	Viton	G 1 1/4 a	25 / 20	10	33631	32821
PDS 2500	Hypalon	G 2 a	40 / 32	10	33634	32817
PDS 2500	Viton	G 2 a	40 / 32	10	33633	32822
PDS 7500	Hypalon	G 2 3/4 a	63 / 50	4	33636	32818
PDS 7500	Viton	G 2 3/4 a	63 / 50	4	34599	34615

3					
Pressure gauge complete with connection					
Glycerinedampening	without			with	
Material of connector	PP		PVC	PP	PVC
Measuring range	0... 6 bar	32949	35476	32948	35480
	0...16 bar	32951	35478	32950	35477

Do not use a pressure gauge for suction air chamber applications!

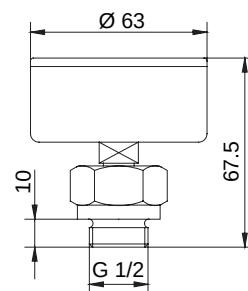


4								
						Part No.		
Type	Fig.	D	di	da	L	PVC	PP	
PDS 80	A	G 3/4	4	6	24	19480	34846	
			6	8	30	28159	-	
			6	9	30	34926	34708	
			6	12	55	19175	-	
	B		6	12	30	23342	-	
	C		-	10	15	25167	-	
			-	12	15	27518	-	
	-		16	17	25625	33793		
	D	-	G 1/4	20	25165	34676		
PDS 250	B	G 1 1/4	9	15	41	25921	-	
PDS 750			16	26	50	25936	35694	
			C	-	12	22	25923	-
				-	16	22	27672	27664
				-	20	22	25937	35490
D			-	G 3/8	28	25930	33797	
			-	G 1/2	22	25943	33798	
F			-	-	47	25956	-	
PDS 2500	C ₂	G2	-	32	29	32932	-	
			-	40	29	32933	-	
			-	50	90	32934	-	
PDS 7500	C ₂	G 2 3/4	-	50	41	32935	-	
			-	63	41	32936	-	

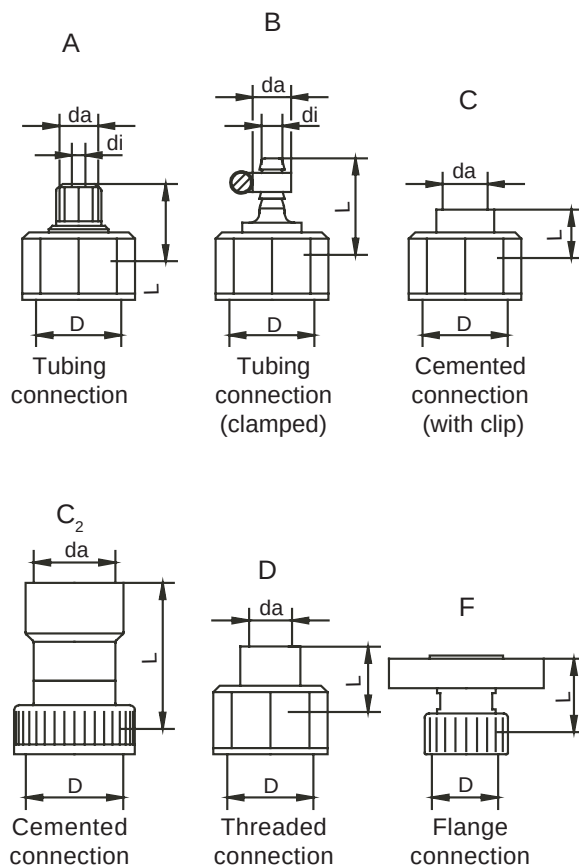


4		
Type	Dummy plug	
	Dimension A	Part No.
PDS 80	G 3/4	32941
PDS 250	G 1 1/4	32947
PDS 750	G 1 1/4	32947
PDS 2500	G 2	32973
PDS 7500	G 2 3/4	32974

If the pulsation dampener is connected via a tee-fitting a dummy plug is required.

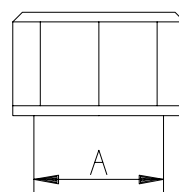


PDS 80 with screwed connection for direct pump mounting

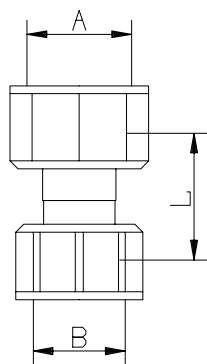


Screwed PDS 80 connection for direct pump mounting			
A	B	L	Part No.
G 3/4	G 5/8	32	32937
G 3/4	G 3/4	30	32938

Filling devices

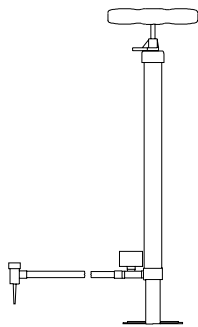

Filling device for compressed air up to 6 bar;supply by foot pump;
Part No.: 12724332

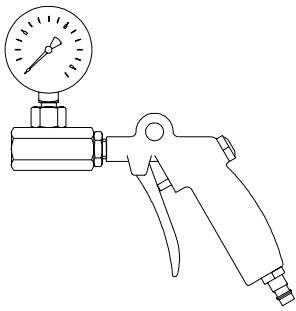

Filling device for compressed air up to 6 bar;supply by compressed air system;
Part No.: 12724321

1. Installation

In order for pulsation dampeners to dampen pressure peaks and pulsations perfectly they have to be installed correctly. Therefore it is necessary to mount them very close to the point where pressure peaks are to be dampened. For metering pumps, this place would be right after the discharge valve (or for suction air chambers, just before the suction valve). To avoid superfluous deflection and pipe friction loads, it is recommended to use a straight connecting pipe, which corresponds to the connection nominal width of the pulsation dampener.

Large-size pulsation dampeners and those with tubing connections must be fastened separately; piping must not transmit mechanical stress to the PDS.

2. Pressurizing

CAUTION!

Use air or nitrogen. Do never use oxygen. The pulsation dampeners are not charged when stored or dispatched. (See section 3 for suction air chambers).

The pulsation dampener is most effective if the initial pressure is about 0.6 times the final average operating pressure. If the pulsation dampener is not fitted with a pressure gauge, it is recommended to check the initial pressure (pv) after 500 working hours. The same should be done before startup and after long periods of disuse. Check the device every three months.

Charging with air

Before checking or refilling, disconnect the pulsation dampener from the system under pressure by means of shutoff valve V1 and stop the liquid flow by means of valve 2.

PDS pulsation dampeners with separating diaphragm are charged with compressed air. For this purpose, they are fitted with commercial tire inflator valves. As the pulsation dampeners are plastic and suitable for an operating pressure of maximum 10 bar requiring an initial pressure of maximum 6 bar, virtually any available compressed air system can be used.

If the air pressure exceeds the maximally permissible operating pressure of the pulsation dampener, a pressure reducing valve must be added the pressure of which must be lower than the maximum operating pressure.

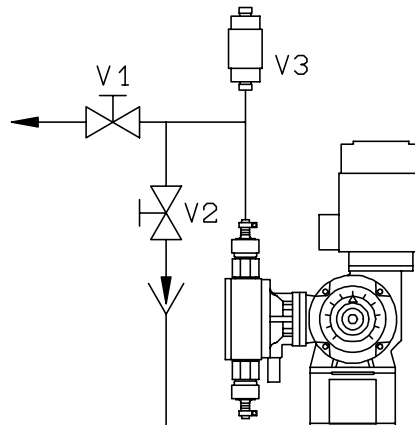


Figure 1
Connection via tee-fitting

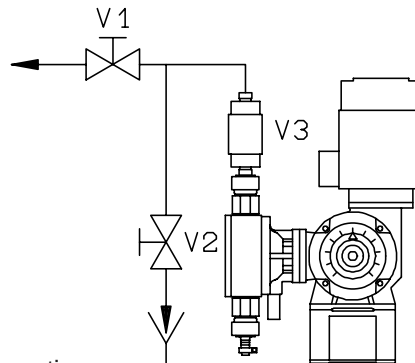


Figure 2
Inline connection

V1: Shutoff valve (ball tap)

V2: Shutoff valve (ball tap)

V3: PDS gas charging valve (tire inflator valve)

CAUTION!


To pressurize the gas cushion, the liquid flow must be stopped. Otherwise, the actual dampening volume remains too small although the gas pressure can be brought up to the desired level. By interrupting the liquid flow, the gas pressure is able to displace the liquid and optimally fill the gas chamber. For this purpose, switch off the metering pumps, shut valve V1 and open valve V2.

3. Suction air chamber


PDS pulsation dampeners for suction air chamber use are not pressurized. The air trapped in the dead spaces during PDS manufacturing expands with the suction stroke and usually provides sufficient dampening. If this is not the case, just press down the valve pin briefly to prime air (vacuum filling) until dampened operation is achieved. For filling in the case of excess pressure in the suction line, see section 2.

4. Fitting a new separating diaphragm


If the separating diaphragm has to be replaced because, due to lacking chemical resistance, another material must be used, or a new diaphragm is required due to operational wear, disconnect the pulsation dampener from the pressure system (figures 1 and 2; switch off the metering pump, shut valve V1 and open valve V2). Dismount the PDS. At both ends, the flanges or union nuts which press the sealing cones into the separating diaphragm have to be detached. Remove sealing cones and support pipe. Insert the new separating diaphragm so that the ends project the same distance on both sides. Push one sealing cone with the support pipe through the separating diaphragm and place the second cone against it. Fasten flanges / union nuts evenly (press/screw clamp) after pressing the sealing cones mechanically against each other.

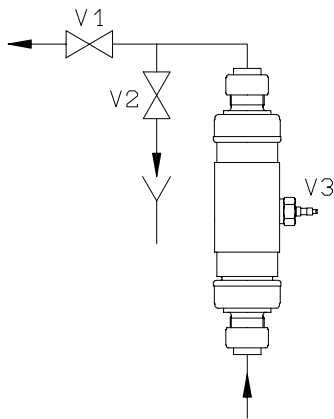

Filling device for compressed air (max. 6 bar)

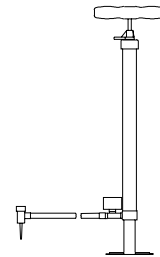

Supply by foot pum

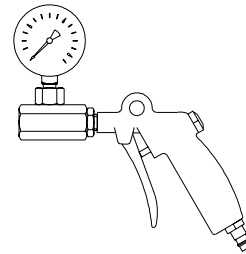

Supply by compressed air system

Warranty



Please copy and send with the device.

If the device breaks down within the period of warranty,
please return it in a cleaned condition with the complete warranty application, filled out.

Sender

Company:..... Phone:..... Date:.....

Address:.....

Contact person:

Manufacturer order-no.: Delivery date:.....

Device type:..... Serial no.:

Nominal capacity/nominal pressure:

Description of fault:

.....

.....

Type of fault:

1. Mechanical fault

- ☐ premature wear
- ☐ wear parts
- ☐ breakage/other damage
- ☐ damage in transit

2. Electrical fault

- ☐ loose connections such as plug connector or cable
- ☐ operating elements (e.g.. switches/buttons)
- ☐ electronics - corrosion

3. Leaks

- ☐ connections
- ☐ dosing head

4. No or inadequate function

- ☐ defective diaphragm
- ☐ other

Service conditions of the device

Point of use / system designation:.....

Accessories used (Suction line, etc.):.....

.....

.....

Commissioning (date):

Duty period (approx. operating hours):

Please describe the specifics of the installation and provide a simple diagram with details of the material, diameter, length and levels.

EN 12

Declaration of harmlessness (please fill out a separate form for each appliance)	
We forward the following device for repairs:	
Type of device: _____ Part-no.: _____ Order-no.: _____ Delivery date: _____ Reason for repair: _____ _____	
Medium used: _____	Properties: irritant: yes/no corrosive: yes/no
We hereby certify that the machine has been thoroughly cleaned inside and out before its dispatch and that it is free from health risk chemical, biological and radioactive materials as well as having been drained of oil. *) <i>If the manufacturer find it necessary to carry out further cleaning work, we accept the charge will be made to us.</i> We certify that the aforementioned information is correct and complete and that the unit is dispatched in compliance with legal requirements.	
Company / address: Customer-number: Contact person:	Phone: Fax: E-Mail:
_____ Date	_____ Signature / stamp
*) If not applicable please cross out!	



Lutz-Jesco GmbH

Am Bostelberge 19
30900 Wedemark
Germany

Phone: +49 5130 5802-0
Fax: +49 5130 580268
info@lutz-jesco.com
www.lutz-jesco.com

24h-Hotline: +49 5130 580 280

Austria

Lutz-Jesco GmbH

Aredstraße 7/2
2544 Leobersdorf
Austria

Phone: +43 2256 62180
Fax: +43 2256 6218062
info@lutz-jesco.at
www.lutz-jesco.at

Great Britain

Lutz-Jesco (GB) Ltd.

Gateway Estate
West Midlands Freeport
Birmingham B26 3QD
Great Britain

Phone: +44 121 782 2662
Fax: +44 121 782 2680
info@lutz-jesco.co.uk
www.lutz-jesco.co.uk

Netherlands

Lutz-Jesco Nederland B.V.

Nijverheidstraat 14 C
2984 AH Ridderkerk
Netherlands

Phone: +31 180 499460
Fax: +31 180 497516
info@lutz-jesco.nl
www.lutz-jesco.nl

Hungary

Lutz-Jesco Üzletág

Vasvári P. u. 9.
9024 Győr
Hungary

Phone: +36 96 523046
Fax: +36 96 523047
info@lutz-jesco.hu
www.lutz-jesco.hu

USA

Lutz-JESCO America Corp.

55 Bermar Park
Rochester, NY 14624
USA

Phone: +1 585 426-0990
Fax: +1 585 426-4025
mail@jescoamerica.com
www.jescoamerica.com

East Asia

Lutz-Jesco
East Asia Sdn Bhd
6 Jalan Saudagar U1/16
Hicom Glenmarie Industrial Park
40150 Shah Alam /Selangor
Malaysia

Phone: +603 5569 2322
Fax: +603 5569 1322
info@lutz-jescoasia.com
www.lutz-jescoasia.com

Middle East

Lutz-Jesco Middle East FZE

P.O. Box 9614
SAIF-Free Zone Center
Sharjah
UAE

Phone: +971 6 5572205
Fax: +971 6 5572230
info@jescome.com
www.jescome.com

Best.-Nr. BA-12701-02-V04
Technische Änderungen
und Irrtümer vorbehalten
© Lutz-Jesco GmbH 06.2016
Printed in Germany